

LibreVNA SCPI Programming Guide

April 22, 2022

Contents

1	Introduction	2
2	SCPI Server Configuration	2
3	General Syntax	2
4	Commands	3
4.1	General Commands	3
4.1.1	*IDN	3
4.1.2	*LST	3
4.2	Device Commands	3
4.2.1	DEVIce:DISConnect	3
4.2.2	DEVIce:CONNect	3
4.2.3	DEVIce:LIST	4
4.2.4	DEVIce:MODE	4
4.2.5	DEVIce:REFerence:OUT	5
4.2.6	DEVIce:REFerence:IN	5
4.2.7	DEVIce:STATus:UNLOCKed	6
4.2.8	DEVIce:STATus:ADCOVERload	6
4.2.9	DEVIce:STATus:UNLEVel	6
4.2.10	DEVIce:INFo:FWREVision	6
4.2.11	DEVIce:INFo:HWREVision	6
4.2.12	DEVIce:INFo:TEMPeratures	7
4.2.13	DEVIce:INFo:MINFrequency	7
4.2.14	DEVIce:INFo:MAXFrequency	7
4.2.15	DEVIce:INFo:MINIFBW	7
4.2.16	DEVIce:INFo:MAXIFBW	7
4.2.17	DEVIce:INFo:MAXPoints	8
4.2.18	DEVIce:INFo:MINPOWER	8
4.2.19	DEVIce:INFo:MAXPOWER	8
4.2.20	DEVIce:INFo:MINRBW	8
4.2.21	DEVIce:INFo:MAXRBW	8
4.2.22	DEVIce:INFo:MAXHARMonicfrequency	8
4.3	VNA Commands	9
4.3.1	VNA:SWEEP	9
4.3.2	VNA:FREQuency:SPAN	9
4.3.3	VNA:FREQuency:START	9
4.3.4	VNA:FREQuency:CENTer	10
4.3.5	VNA:FREQuency:STOP	10

4.3.6	VNA:FREQuency:FULL	10
4.3.7	VNA:POWer:START	10
4.3.8	VNA:POWer:STOP	11
4.3.9	VNA:ACQuisition:IFBW	11
4.3.10	VNA:ACQuisition:POINTS	11
4.3.11	VNA:ACQuisition:AVG	12
4.3.12	VNA:ACQuisition:AVGLEVel	12
4.3.13	VNA:ACQuisition:FINished	12
4.3.14	VNA:ACQuisition:LIMIT	12
4.3.15	VNA:STIMulus:LVL	13
4.3.16	VNA:STIMulus:FREQuency	13
4.3.17	VNA:TRACe:LIST	13
4.3.18	VNA:TRACe:DATA	14
4.3.19	VNA:TRACe:AT	14
4.3.20	VNA:TRACe:TOUCHSTONE	14
4.3.21	VNA:TRACe:MAXFrequency	15
4.3.22	VNA:TRACe:MINFrequency	15
4.3.23	VNA:TRACe:MAXAmplitude	15
4.3.24	VNA:TRACe:MINAmplitude	16
4.3.25	VNA:TRACe:NEW	16
4.3.26	VNA:TRACe:RENAME	16
4.3.27	VNA:TRACe:PAUSE	16
4.3.28	VNA:TRACe:RESUME	16
4.3.29	VNA:TRACe:PAUSED	17
4.3.30	VNA:TRACe:PARAMeter	17
4.3.31	VNA:TRACe:TYPE	17
4.3.32	VNA:CALibration:TYPE	17
4.3.33	VNA:CALibration:MEASure	18
4.3.34	VNA:CALibration:BUSY	18
4.3.35	VNA:CALibration:SAVE	18
4.3.36	VNA:CALibration:LOAD	18
4.4	Signal Generator Commands	19
4.4.1	GENerator:FREQuency	19
4.4.2	GENerator:LVL	19
4.4.3	GENerator:PORT	19
4.5	Spectrum Analyzer Commands	20
4.5.1	SA:FREQuency:SPAN	20
4.5.2	SA:FREQuency:START	20
4.5.3	SA:FREQuency:CENTer	20
4.5.4	SA:FREQuency:STOP	21
4.5.5	SA:FREQuency:FULL	21
4.5.6	SA:ACQuisition:RBW	21
4.5.7	SA:ACQuisition:WINDow	21
4.5.8	SA:ACQuisition:DETEctor	22
4.5.9	SA:ACQuisition:AVG	22
4.5.10	SA:ACQuisition:AVGLEVel	23
4.5.11	SA:ACQuisition:FINished	23
4.5.12	SA:ACQuisition:LIMIT	23
4.5.13	SA:ACQuisition:SIGid	23
4.5.14	SA:TRACKing:ENable	24
4.5.15	SA:TRACKing:PORT	24


4.5.16	SA:TRACKing:LVL	24
4.5.17	SA:TRACKing:OFFset	25
4.5.18	SA:TRACKing:NORMalize:ENable	25
4.5.19	SA:TRACKing:NORMalize:MEASure	25
4.5.20	SA:TRACKing:NORMalize:LVL	25
4.5.21	SA:TRACe:LIST	26
4.5.22	SA:TRACe:DATA	26
4.5.23	SA:TRACe:AT	26
4.5.24	SA:TRACe:MAXFrequency	27
4.5.25	SA:TRACe:MINFrequency	27
4.5.26	SA:TRACe:MAXAmplitude	27
4.5.27	SA:TRACe:MINAmplitude	27
4.5.28	SA:TRACe:NEW	27
4.5.29	SA:TRACe:RENAME	28
4.5.30	SA:TRACe:PAUSE	28
4.5.31	SA:TRACe:RESUME	28
4.5.32	SA:TRACe:PAUSED	28
4.5.33	SA:TRACe:PARAMeter	28
4.5.34	SA:TRACe:TYPE	29

1 Introduction

The LibreVNA-GUI contains a TCP server that can be used to control the LibreVNA with SCPI commands.

2 SCPI Server Configuration

The server is configurable in the preferences: `Window >> Preferences >> General`

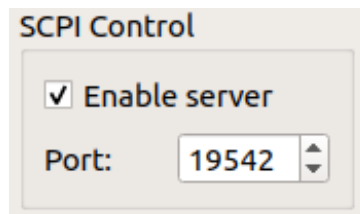

If enabled, it will accept any TCP connection at the configured port. Once the connection is established, it can be used to send SCPI commands and receive replies. Only one connection at a time is possible, if a second connection is created, the first one will be closed by the LibreVNA-GUI. Alternatively, a port can be manually configured by setting the “port” argument:

```
./LibreVNA-GUI --port 1234
```

This enables the SCPI server at the specified port, regardless of what is configured in the preferences (useful for starting multiple instances at different ports at the same time). If no graphical user interface is required, the LibreVNA-GUI can be hidden:

```
./LibreVNA-GUI --port 1234 --no-gui
```

3 General Syntax

The syntax follows the usual SCPI rules:

- All commands are case insensitive (implicitly converted to uppercase before evaluated)
- The command tree is organized in branches, separated by a colon:

```
:VNA:TRACE:LIST?
```

- Multiple commands can be concatenated in one line using a semicolon:

```
:DEVICE:CONNECT;:DEVICE:INFO:FWRRevision?
```

- If a command starts with a colon it is evaluated from the root branch, otherwise the last used branch is assumed:

```
:VNA:FREQUENCY:START 1000000  
STOP 2000000 #No colon, VNA:FREQUENCY branch was used before
```

- Branches and commands can be abbreviated by using only the uppercase part of their name, the following commands are identical:

```
:DEVICE:INFO:LIMITS:MINFREQUENCY?  
:DEV:INF:LIM:MINF?
```

- Every command generates a (possibly empty) response, terminated with a newline character.

- Some commands require additional arguments that have to be passed after the command (separated by spaces):

```
: DEV : REF : OUT 10
```

- Two types of commands are available:
 - **Events** change a setting or trigger an action. They usually have an empty response (unless there was an error).
 - **Queries** request information. They end with a question mark.
 Some commands are both events and queries, depending on whether the question mark is present:

```
: VNA : FREQ : SPAN 50000000 # Set the span
: VNA : FREQ : SPAN? # Read the current span
```

4 Commands

4.1 General Commands

4.1.1 *IDN

Query:

Effect:	Returns the identifications string
Syntax:	*IDN?
Parameters:	None
Return value:	LibreVNA-GUI

4.1.2 *LST

Query:

Effect:	Lists all available commands
Syntax:	*LST?
Parameters:	None
Return value:	List of commands, separated by newline

4.2 Device Commands

This section contains general device commands, available regardless of the current mode.

4.2.1 DEVIce:DISConnect

Event:

Effect:	Disconnects from the device
Syntax:	DEVIce:DISConnect
Parameters:	None

4.2.2 DEVIce:CONNect

Event:

--	--

Effect:	Connects to a device. If no serialnumber is specified, the connection is made with the first device found
Syntax:	DEVice:CONNect [<serialnumber>]
Parameters:	<serialnumber> Serialnumber of the device that should be connected

Example

```
:DEV:CONN 206039903350
```

Query:

Effect:	Queries the serial number of the connected device
Syntax:	DEVice:CONNect?
Parameters:	None
Return value:	<serialnumber> or “Not connected”

Example

```
:DEV:CONN?
206039903350
```

4.2.3 DEVice:LIST

Query:

Effect:	Lists all available devices by their serial numbers
Syntax:	DEVice:LIST?
Parameters:	None
Return value:	List of serialnumbers

Example

```
:DEV:LIST?
206039903350,208939A23350
```

4.2.4 DEVice:MODE

Event:

Effect:	Switches the device to the specified mode
Syntax:	DEVice:MODE <mode>
Parameters:	<mode>: VNA: set to vector analyzer GEN: set to signal generator SA: set to spectrum analyzer

Example

```
:DEV:MODE VNA
```

Query:

Effect:	Queries the currently active mode
Syntax:	DEVIce:MODE?
Parameters:	None
Return value:	<mode>: VNA: set to vector analyzer GEN: set to signal generator SA: set to spectrum analyzer

Example

```
:DEV:MODE?  
VNA
```

4.2.5 DEVIce:REFEreNce:OUT

Event:

Effect:	Sets the reference output frequency
Syntax:	DEVIce:REFEreNce:OUT <freq>
Parameters:	<freq> in MHz, either 0 (disabled), 10 or 100

Query:

Effect:	Queries the reference output frequency
Syntax:	DEVIce:REFEreNce:OUT?
Parameters:	None
Return value:	Output frequency in MHz

4.2.6 DEVIce:REFEreNce:IN

Event:

Effect:	Set the reference input mode
Syntax:	DEVIce:REFEreNce:IN <mode>
Parameters:	<mode>: INT: use internal reference EXT: use external reference AUTO: automatic reference switching

Query:

Effect:	Queries the reference source
Syntax:	DEVIce:REFEreNce:IN?
Parameters:	None
Return value:	INT or EXT

4.2.7 DEVIce:STAtus:UNLOcked

Query:

Effect:	Queries the PLL lock error flag
Syntax:	DEVIce:STAtus:UNLOcked?
Parameters:	None
Return value:	TRUE or FALSE

4.2.8 DEVIce:STAtus:ADCOVERload

Query:

Effect:	Queries the ADC overload error flag
Syntax:	DEVIce:STAtus:ADCOVERload?
Parameters:	None
Return value:	TRUE or FALSE

4.2.9 DEVIce:STAtus:UNLEVel

Query:

Effect:	Queries the output level error flag
Syntax:	DEVIce:STAtus:UNLEVel?
Parameters:	None
Return value:	TRUE or FALSE

4.2.10 DEVIce:INFo:FWREVIion

Query:

Effect:	Returns the firmware revision of the connected device
Syntax:	DEVIce:INFo:FWREVIion?
Parameters:	None
Return value:	<major>.<minor>.<patch>

Example

```
:DEV:INF:FWREV?  
1.0.0
```

4.2.11 DEVIce:INFo:HWREVIion

Query:

Effect:	Returns the hardware revision of the connected device
Syntax:	DEVIce:INFo:HWREVIion?
Parameters:	None
Return value:	<revision>, single char

Example

```
:DEV:INF:HWREV?  
B
```


4.2.12 DEVice:INFo:TEMPeratures

Query:

Effect:	Queries the temperatures of certain chips
Syntax:	DEVice:INFo:TEMPeratures?
Parameters:	None
Return value:	<source>/<I.LO>/<CPU>

Example

```
: DEV : INF : TEMP ?  
45/51/31
```

4.2.13 DEVice:INFo:MINFrequency

Query:

Effect:	Queries the lowest frequency the device can measure
Syntax:	DEVice:INFo:MINFrequency?
Parameters:	None
Return value:	lowest frequency in Hz

4.2.14 DEVice:INFo:MAXFrequency

Query:

Effect:	Queries the highest frequency the device can measure
Syntax:	DEVice:INFo:MAXFrequency?
Parameters:	None
Return value:	highest frequency in Hz

4.2.15 DEVice:INFo:MINIFBW

Query:

Effect:	Queries the lowest IF bandwidth setting
Syntax:	DEVice:INFo:MINIFBW?
Parameters:	None
Return value:	lowest possible IF bandwidth in Hz

4.2.16 DEVice:INFo:MAXIFBW

Query:

Effect:	Queries the highest IF bandwidth setting
Syntax:	DEVice:INFo:MAXIFBW?
Parameters:	None
Return value:	highest possible IF bandwidth in Hz

4.2.17 DEVIce:INFo:MAXPoints

Query:

Effect:	Queries the maximum number of points per sweep
Syntax:	DEVIce:INFo:MAXPoints?
Parameters:	None
Return value:	maximum number of points

4.2.18 DEVIce:INFo:MINPOWer

Query:

Effect:	Queries the minimum output power
Syntax:	DEVIce:INFo:MINPOWer?
Parameters:	None
Return value:	minimum output power in dBm

4.2.19 DEVIce:INFo:MAXPOWer

Query:

Effect:	Queries the maximum output power
Syntax:	DEVIce:INFo:MAXPOWer?
Parameters:	None
Return value:	maximum output power in dBm

4.2.20 DEVIce:INFo:MINRBW

Query:

Effect:	Queries the lowest resolution bandwidth setting
Syntax:	DEVIce:INFo:MINRBW?
Parameters:	None
Return value:	lowest possible resolution bandwidth in Hz

4.2.21 DEVIce:INFo:MAXRBW

Query:

Effect:	Queries the highest resolution bandwidth setting
Syntax:	DEVIce:INFo:MAXRBW?
Parameters:	None
Return value:	highest possible resolution bandwidth in Hz

4.2.22 DEVIce:INFo:MAXHARMonicfrequency

Query:

Effect:	Queries the (theoretical) maximum frequency when using harmonic mixing in VNA mode
Syntax:	DEVIce:INFo:MAXHARMonicfrequency?
Parameters:	None

Return value:	maximum frequency in Hz
----------------------	-------------------------

4.3 VNA Commands

These commands change or query VNA settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the VNA mode is active (e.g. it is possible to change the span while in signal generator mode but it does not effect the LibreVNA until the mode is switched to VNA). Certain commands (like taking a calibration measurement) are only available in VNA mode and will return an error if another mode is active.

4.3.1 VNA:SWEEP

Event:

Effect:	Sets the type of the sweep
Syntax:	VNA:SWEEP
Parameters:	<type>, either FREQUENCY or POWER

Query:

Effect:	Queries the currently selected type
Syntax:	VNA:SWEEP?
Parameters:	None
Return value:	<type>, either FREQUENCY or POWER

4.3.2 VNA:FREQuency:SPAN

Event:

Effect:	Sets the span of the sweep
Syntax:	VNA:FREQuency:SPAN
Parameters:	, in Hz

Query:

Effect:	Queries the currently selected span
Syntax:	VNA:FREQuency:SPAN?
Parameters:	None
Return value:	span in Hz

4.3.3 VNA:FREQuency:START

Event:

Effect:	Sets the start frequency of the sweep
Syntax:	VNA:FREQuency:START
Parameters:	<start frequency>, in Hz

Query:

Effect:	Queries the currently selected start frequency
----------------	--

Syntax:	VNA:FREQuency:START?
Parameters:	None
Return value:	start frequency in Hz

4.3.4 VNA:FREQuency:CENTer

Event:

Effect:	Sets the center frequency of the sweep
Syntax:	VNA:FREQuency:CENTer
Parameters:	<center frequency>, in Hz

Query:

Effect:	Queries the currently selected center frequency
Syntax:	VNA:FREQuency:CENTer?
Parameters:	None
Return value:	center frequency in Hz

4.3.5 VNA:FREQuency:STOP

Event:

Effect:	Sets the stop frequency of the sweep
Syntax:	VNA:FREQuency:STOP
Parameters:	<stop frequency>, in Hz

Query:

Effect:	Queries the currently selected stop frequency
Syntax:	VNA:FREQuency:STOP?
Parameters:	None
Return value:	stop frequency in Hz

4.3.6 VNA:FREQuency:FULL

Event:

Effect:	Sets the device to the maximum span possible
Syntax:	VNA:FREQuency:FULL
Parameters:	None

4.3.7 VNA:POWer:START

Event:

Effect:	Sets the start power of the power sweep
Syntax:	VNA:POWer:START
Parameters:	<start power>, in dBm

Query:

Effect:	Queries the currently selected start power
Syntax:	VNA:POWer:START?
Parameters:	None
Return value:	start power in dBm

4.3.8 VNA:POWer:STOP

Event:

Effect:	Sets the stop power of the power sweep
Syntax:	VNA:POWer:STOP
Parameters:	<stop power>, in dBm

Query:

Effect:	Queries the currently selected stop power
Syntax:	VNA:POWer:STOP?
Parameters:	None
Return value:	stop power in dBm

4.3.9 VNA:ACQquisition:IFBW

Event:

Effect:	Sets the IF bandwidth
Syntax:	VNA:ACQquisition:IFBW
Parameters:	<IF bandwidth>, in Hz

Query:

Effect:	Queries the currently selected IF bandwidth
Syntax:	VNA:ACQquisition:IFBW?
Parameters:	None
Return value:	IF bandwidth in Hz

4.3.10 VNA:ACQquisition:POINTS

Event:

Effect:	Sets the number of points per sweep
Syntax:	VNA:ACQquisition:POINTS
Parameters:	<points>

Query:

Effect:	Queries the currently selected number of points
Syntax:	VNA:ACQquisition:POINTS?
Parameters:	None
Return value:	points

4.3.11 VNA:ACQquisition:AVG

Event:

Effect:	Sets the number of sweeps over which a moving average is calculated
Syntax:	VNA:ACQquisition:AVG
Parameters:	<averaging sweeps>

Query:

Effect:	Queries the currently configured number of sweeps
Syntax:	VNA:ACQquisition:AVG?
Parameters:	None
Return value:	<averaging sweeps>

4.3.12 VNA:ACQquisition:AVGLEVel

Query:

Effect:	Queries the number of sweeps that have been acquired by the average function.
Syntax:	VNA:ACQquisition:AVGLVLeL?
Parameters:	None
Return value:	<acquired sweeps>

<acquired sweeps> resets to zero whenever a setting is changed. It is incremented at the end of each sweep, but will not go above the number of configured sweeps for the averaging.

Example (assuming <averaging sweep> = 3):

# of active sweep	<acquired sweeps>
1	0
2	1
3	2
4	3
5	3

4.3.13 VNA:ACQquisition:FINished

Query:

Effect:	Queries whether the average filter has reached a steady state (that is <acquired sweeps> = <averaging sweeps>)
Syntax:	VNA:ACQquisition:FINished?
Parameters:	None
Return value:	TRUE or FALSE

4.3.14 VNA:ACQquisition:LIMit

Query:

Effect:	Queries the status of limits that maybe set up on any graph
Syntax:	VNA:ACQquisition:LIMit?
Parameters:	None

Return value:	PASS or FAIL
----------------------	--------------

4.3.15 VNA:STIMulus:LVL

Event:

Effect:	Sets the output power of the stimulus signal when sweep type is frequency
Syntax:	VNA:STIMulus:LVL
Parameters:	<power>, in dBm

Query:

Effect:	Queries the currently selected output power
Syntax:	VNA:STIMulus:LVL?
Parameters:	None
Return value:	power in dBm

4.3.16 VNA:STIMulus:FREQuency

Event:

Effect:	Sets the frequency of the stimulus signal when sweep type is power
Syntax:	VNA:STIMulus:FREQuency
Parameters:	<freq>, in Hz

Query:

Effect:	Queries the currently selected frequency
Syntax:	VNA:STIMulus:FREQuency?
Parameters:	None
Return value:	frequency in Hz

4.3.17 VNA:TRACe:LIST

Query:

Effect:	Lists the names of all available traces
Syntax:	VNA:TRACe:LIST?
Parameters:	None
Return value:	comma-separated list of trace name

Example

VNA:TRACe:LIST? S11 , S12 , S21 , S22
--

4.3.18 VNA:TRACe:DATA

Query:

Effect:	Returns the data of a trace
Syntax:	VNA:TRACe:DATA?
Parameters:	<trace>, either by name or by index
Return value:	comma-separated list of tuples [x, real(y), imag(y)]

Depending on the sweep and possible configured math operations, x may be either frequency, power or time.

Example

```
:VNA:TRAC:DATA? S11
[1e+6,0.400172,0.0377869],
[6.67556e+8,-0.0922281,-0.00990373],
[1.33411e+9,-0.0341439,-0.0331184],
[2.00067e+9,0.00750893,0.0490847],
[2.66722e+9,0.0472666,-0.175552],
[3.33378e+9,-0.106545,-0.00952825],
[4.00033e+9,-0.102039,0.0890605],
[4.66689e+9,0.0464292,0.118183],
[5.33344e+9,0.13223,-0.00780554],
[6e+9,-0.0314859,-0.246024]
```

Note: actual response will not include newlines between data points, only at the end

4.3.19 VNA:TRACe:AT

Query:

Effect:	Returns the data at a specific frequency (possibly interpolated)
Syntax:	VNA:TRACe:AT?
Parameters:	<trace>, either by name or by index <frequency>, in Hz
Return value:	real,imag (or "NaN,NaN" if specified frequency is invalid)

Example

```
:VNA:TRAC:AT? S11 1200000000
-0.0458452,-0.028729
```

4.3.20 VNA:TRACe:TOUCHSTONE

Query:

Effect:	Returns the content of multiple trace according to the touchstone format
Syntax:	VNA:TRACe:TOUCHSTONE?
Parameters:	<trace1>,<trace2>,<trace3>,...
Return value:	Touchstone file content in ASCII

Some additional constraints apply:

- The number of specified traces must be a square number. The number of ports in the touchstone file is inferred from that.

- Only frequency domain traces are allowed.
- All traces must have the same number of points and the same start/stop frequency.
- The order in which the traces are specified matters and depending on its index and each trace must be a reflection or transmission measurement:
 - Assuming that n is the number of ports of the desired touchstone file, the $n * n$ number of traces must be specified in this order:

$$S_{11} \dots S_{1n}, S_{21} \dots S_{2n}, \dots, S_{n1} \dots S_{nn}$$

- For every trace S_{ij} , the trace must contain a reflection measurement if $i = j$ and a transmission measurement if $i \neq j$.
- Traces can be specified either by name or by index.
- A deviation from any of these points (invalid number of traces, non-existing trace, wrong order, ...) will result in an error being returned.

Example

```
:VNA:TRACE:TOUCHSTONE? S11 S12 S21 S22
# GHZ S RI R 50
1.000000000000 1.000497817993 0.010679213330 0.000013886895
  -0.000054684886 -0.000023392624 -0.000021111371
  0.401717424393 0.702864229679
1.002000000000 1.000323534012 0.010577851906 -0.000011075452
  -0.000013504875 0.000000477609 -0.000007789199
  0.413144201040 0.696514129639
...
```

4.3.21 VNA:TRACe:MAXFrequency

Query:

Effect:	Returns the highest frequency contained in the trace
Syntax:	VNA:TRACe:MAXFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.3.22 VNA:TRACe:MINFrequency

Query:

Effect:	Returns the lowest frequency contained in the trace
Syntax:	VNA:TRACe:MINFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.3.23 VNA:TRACe:MAXAmplitude

Query:

Effect:	Returns the datapoint with the highest amplitude in the trace
Syntax:	VNA:TRACe:MAXAmplitude?
Parameters:	<trace>, either by name or by index

Return value:	<frequency>,<real>,<imag> of the highest amplitude point
----------------------	--

Example

:VNA:TRAC:MAXA? S21 5.66406e+9, -6.21766e-5, -0.000795846
--

4.3.24 VNA:TRACe:MINAmplitude

Query:

Effect:	Returns the datapoint with the lowest amplitude in the trace
Syntax:	VNA:TRACe:MINAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<real>,<imag> of the lowest amplitude point

4.3.25 VNA:TRACe:NEW

Event:

Effect:	Creates a new trace
Syntax:	VNA:TRACe:NEW
Parameters:	<trace name>

4.3.26 VNA:TRACe:RENAME

Event:

Effect:	Changes the name of a trace
Syntax:	VNA:TRACe:RENAME
Parameters:	<trace>, either by name or by index <new name>

4.3.27 VNA:TRACe:PAUSE

Event:

Effect:	Pauses (freezes) a trace
Syntax:	VNA:TRACe:PAUSE
Parameters:	<trace>, either by name or by index

4.3.28 VNA:TRACe:RESUME

Event:

Effect:	Resumes (unfreezes) a trace
Syntax:	VNA:TRACe:RESUME
Parameters:	<trace>, either by name or by index

4.3.29 VNA:TRACe:PAUSED

Query:

Effect:	Queries whether a trace is paused
Syntax:	VNA:TRACe:PAUSED?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.3.30 VNA:TRACe:PARAMeter

Event:

Effect:	Sets the measurement parameter that is stored in the trace
Syntax:	VNA:TRACe:PARAMeter
Parameters:	<trace>, either by name or by index <parameter>, options are S11, S12, S21 or S22

Query:

Effect:	Queries the measurement parameter of a trace
Syntax:	VNA:TRACe:PARAMeter?
Parameters:	<trace>, either by name or by index
Return value:	S11, S12, S21 or S22

4.3.31 VNA:TRACe:TYPE

Event:

Effect:	Sets the storage type of a trace
Syntax:	VNA:TRACe:TYPE
Parameters:	<trace>, either by name or by index <type>, options are OVERWRITE, MAXHOLD or MINHOLD

Query:

Effect:	Queries the storage type of a trace
Syntax:	VNA:TRACe:TYPE?
Parameters:	<trace>, either by name or by index
Return value:	OVERWRITE, MAXHOLD or MINHOLD

4.3.32 VNA:CALibration:TYPE

Event:

Effect:	Sets the calibration type. This command fails if the required measurements have not been taken yet
Syntax:	VNA:CALibration:TYPE
Parameters:	<type>, options are NONE, PORT_1, PORT_2, SOLT, NORMALIZE or TRL

Query:

Effect:	Queries the currently active calibration type
Syntax:	VNA:CALibration:TYPE?
Parameters:	None
Return value:	NONE, PORT_1, PORT_2, SOLT, NORMALIZE or TRL

4.3.33 VNA:CALibration:MEASure

Event:

Effect:	Starts a calibration measurement. This command fails if no device is connected, the VNA mode is not active or a calibration measurement is already in progress.
Syntax:	VNA:CALibration:MEASure
Parameters:	<type>, options are: PORT_1_OPEN PORT_1_SHORT PORT_1_LOAD PORT_2_OPEN PORT_2_SHORT PORT_2_LOAD THROUGH ISOLATION LINE

4.3.34 VNA:CALibration:BUSY

Query:

Effect:	Queries whether a calibration measurement is ongoing
Syntax:	VNA:CALibration:BUSY?
Parameters:	None
Return value:	TRUE or FALSE

4.3.35 VNA:CALibration:SAVE

Event:

Effect:	Saves the active calibration to a file
Syntax:	VNA:CALibration:SAVE
Parameters:	<filename>

Important points when saving/loading calibration files through SCPI commands:

- Filenames must be either absolute or relative to the location of the GUI application.
- SCPI parsing implicitly capitalizes all commands, the file will be saved using only uppercase letters. Similarly, it is not possible to load a file whose filename contains lowercase characters.
- If the LibreVNA-GUI (and thus also the SCPI server) is running on a different machine than the SCPI client, the calibration files will be saved/loaded from the machine that runs the GUI.

4.3.36 VNA:CALibration:LOAD

Query:

Effect:	Loads a calibration file
Syntax:	VNA:CALibration:LOAD?
Parameters:	<filename>
Return value:	TRUE or FALSE

4.4 Signal Generator Commands

These commands change or query signal generator settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the generator mode is active.

4.4.1 GENERator:FREQUENCY

Event:

Effect:	Sets the output frequency
Syntax:	GENERator:FREQUENCY
Parameters:	<frequency>, in Hz

Query:

Effect:	Queries the selected output frequency
Syntax:	GENERator:FREQUENCY?
Parameters:	None
Return value:	frequency in Hz

4.4.2 GENERator:LVL

Event:

Effect:	Sets the output power
Syntax:	GENERator:LVL
Parameters:	<output level>, in dBm

Query:

Effect:	Queries the selected output power
Syntax:	GENERator:LVL?
Parameters:	None
Return value:	output level in dBm

4.4.3 GENERator:PORT

Event:

Effect:	Sets the active output port
Syntax:	GENERator:PORT
Parameters:	<output port> 0: output disabled 1: output signal at port 1 2: output signal at port 2

Query:

Effect:	Queries the selected output
Syntax:	GENerator:PORT?
Parameters:	None
Return value:	output port

4.5 Spectrum Analyzer Commands

These commands change or query spectrum analyzer settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the spectrum analyzer mode is active.

4.5.1 SA:FREQUENCY:SPAN

Event:

Effect:	Sets the span of the sweep
Syntax:	SA:FREQUENCY:SPAN
Parameters:	, in Hz

Query:

Effect:	Queries the currently selected span
Syntax:	SA:FREQUENCY:SPAN?
Parameters:	None
Return value:	span in Hz

4.5.2 SA:FREQUENCY:START

Event:

Effect:	Sets the start frequency of the sweep
Syntax:	SA:FREQUENCY:START
Parameters:	<start frequency>, in Hz

Query:

Effect:	Queries the currently selected start frequency
Syntax:	SA:FREQUENCY:START?
Parameters:	None
Return value:	start frequency in Hz

4.5.3 SA:FREQUENCY:CENTER

Event:

Effect:	Sets the center frequency of the sweep
Syntax:	SA:FREQUENCY:CENTER
Parameters:	<center frequency>, in Hz

Query:

Effect:	Queries the currently selected center frequency
Syntax:	SA:FREQUENCY:CENTer?
Parameters:	None
Return value:	center frequency in Hz

4.5.4 SA:FREQUENCY:STOP

Event:

Effect:	Sets the stop frequency of the sweep
Syntax:	SA:FREQUENCY:STOP
Parameters:	<stop frequency>, in Hz

Query:

Effect:	Queries the currently selected stop frequency
Syntax:	SA:FREQUENCY:STOP?
Parameters:	None
Return value:	stop frequency in Hz

4.5.5 SA:FREQUENCY:FULL

Event:

Effect:	Sets the device to the maximum span possible
Syntax:	SA:FREQUENCY:FULL
Parameters:	None

4.5.6 SA:ACQUISITION:RBW

Event:

Effect:	Sets the resolution bandwidth
Syntax:	SA:ACQUISITION:IFBW
Parameters:	<resolution bandwidth>, in Hz

Query:

Effect:	Queries the currently selected resolution bandwidth
Syntax:	SA:ACQUISITION:IFBW?
Parameters:	None
Return value:	resolution bandwidth in Hz

4.5.7 SA:ACQUISITION:WINDOW

Event:

Effect:	Sets the type of window used in the acquisition
----------------	---

Syntax:	SA:ACQquisition:WINDow
Parameters:	<windowtype> NONE KAISER HANN FLATTOP

Query:

Effect:	Queries the currently selected type of window
Syntax:	SA:ACQquisition:WINDow?
Parameters:	None
Return value:	NONE, KAISER, HANN or FLATTOP

4.5.8 SA:ACQquisition:DETECTOR

Event:

Effect:	Sets the detector type
Syntax:	SA:ACQquisition:DETECTOR
Parameters:	<detector> +PEAK -PEAK NORMAL SAMPLE AVERAGE

Query:

Effect:	Queries the currently selected detector type
Syntax:	SA:ACQquisition:DETECTOR?
Parameters:	None
Return value:	+PEAK, -PEAK, NORMAL, SAMPLE or AVERAGE

4.5.9 SA:ACQquisition:AVG

Event:

Effect:	Sets the number of sweeps over which a moving average is calculated
Syntax:	SA:ACQquisition:AVG
Parameters:	<sweeps>

Query:

Effect:	Queries the currently configured number of sweeps
Syntax:	SA:ACQquisition:AVG?
Parameters:	None
Return value:	sweeps

4.5.10 SA:ACquisition:AVGLEvel

Query:

Effect:	Queries the number of sweeps that have been acquired by the average function.
Syntax:	SA:ACquisition:AVGLVLeL?
Parameters:	None
Return value:	<acquired sweeps>

<acquired sweeps> resets to zero whenever a setting is changed. It is incremented at the end of each sweep, but will not go above the number of configured sweeps for the averaging.

Example (assuming <averaging sweep> = 3):

# of active sweep	<acquired sweeps>
1	0
2	1
3	2
4	3
5	3

4.5.11 SA:ACquisition:FINished

Query:

Effect:	Queries whether the average filter has reached a steady state (that is <acquired sweeps> = <averaging sweeps>)
Syntax:	SA:ACquisition:FINished?
Parameters:	None
Return value:	TRUE or FALSE

4.5.12 SA:ACquisition:LIMit

Query:

Effect:	Queries the status of limits that maybe set up on any graph
Syntax:	SA:ACquisition:LIMit?
Parameters:	None
Return value:	PASS or FAIL

4.5.13 SA:ACquisition:SIGid

Event:

Effect:	Enables/disables signal identification
Syntax:	SA:ACquisition:SIGid
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether signal identification is enabled
Syntax:	SA:ACquisition:SIGid?
Parameters:	None

Return value:	TRUE or FALSE
----------------------	---------------

4.5.14 SA:TRACKing:ENable

Event:

Effect:	Enables/disables the tracking generator
Syntax:	SA:TRACKing:ENable
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether tracking generator is enabled
Syntax:	SA:TRACKing:ENable?
Parameters:	None
Return value:	TRUE or FALSE

4.5.15 SA:TRACKing:PORT

Event:

Effect:	Sets the output port of the tracking generator
Syntax:	SA:TRACKing:PORT
Parameters:	<port>, either 1 or 2

Query:

Effect:	Queries the output port of the tracking generator
Syntax:	SA:TRACKing:PORT?
Parameters:	None
Return value:	1 or 2

4.5.16 SA:TRACKing:LVL

Event:

Effect:	Sets the output power of the tracking generator
Syntax:	SA:TRACKing:LVL
Parameters:	<output level>, in dBm

Query:

Effect:	Queries the selected output power of the tracking generator
Syntax:	SA:TRACKing:LVL?
Parameters:	None
Return value:	output level in dBm

4.5.17 SA:TRACKing:OFFset

Event:

Effect:	Sets the offset frequency of the tracking generator
Syntax:	SA:TRACKing:OFFset
Parameters:	<offset>, in Hz

Query:

Effect:	Queries the selected offset frequency of the tracking generator
Syntax:	SA:TRACKing:OFFset?
Parameters:	None
Return value:	offset in Hz

4.5.18 SA:TRACKing:NORMalize:ENable

Event:

Effect:	Enables/disables normalization. If the span has changed since the last active normalization, a normalization measurement is also started.
Syntax:	SA:TRACKing:NORMalize:ENable
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether tracking generator normalization is enabled
Syntax:	SA:TRACKing:NORMalize:ENable?
Parameters:	None
Return value:	TRUE or FALSE

4.5.19 SA:TRACKing:NORMalize:MEASure

Event:

Effect:	Triggers a new normalization measurement
Syntax:	SA:TRACKing:NORMalize:MEASure
Parameters:	None

4.5.20 SA:TRACKing:NORMalize:LVL

Event:

Effect:	Sets the reference level for the normalization
Syntax:	SA:TRACKing:NORMalize:LVL
Parameters:	<normalization level>, in dBm

Query:

Effect:	Queries the selected reference level for the normalization
Syntax:	SA:TRACKing:NORMalize:LVL?
Parameters:	None

Return value:	normalization level in dBm
----------------------	----------------------------

4.5.21 SA:TRACe:LIST

Query:

Effect:	Lists the names of all available traces
Syntax:	SA:TRACe:LIST?
Parameters:	None
Return value:	comma-separated list of trace name

Example

```
VNA:TRAC:LIST?
Port1,Port2
```

4.5.22 SA:TRACe:DATA

Query:

Effect:	Returns the data of a trace
Syntax:	SA:TRACe:DATA?
Parameters:	<trace>, either by name or by index
Return value:	comma-separated list of tuples [x, dBm]

Example

```
:SA:TRACE:DATA? PORT1
[9.75e+8,-100.351],
[9.7505e+8,-95.7394],
[9.751e+8,-97.5749],
[9.7515e+8,-96.9667],
[9.752e+8,-96.2391],
[9.7525e+8,-94.8761],
[9.753e+8,-96.0805],
[9.7535e+8,-95.7997],
[9.754e+8,-95.2021],
[9.7545e+8,-96.3472]
```

Note: actual response will not include newlines between data points, only at the end

4.5.23 SA:TRACe:AT

Query:

Effect:	Returns the data at a specific frequency (possibly interpolated)
Syntax:	SA:TRACe:AT?
Parameters:	<trace>, either by name or by index <frequency>, in Hz
Return value:	<dBm> or "NaN" if specified frequency is invalid

Example

```
:SA:TRAC:AT? Port1 1000000000
-96.424
```

4.5.24 SA:TRACe:MAXFrequency

Query:

Effect:	Returns the highest frequency contained in the trace
Syntax:	SA:TRACe:MAXFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.5.25 SA:TRACe:MINFrequency

Query:

Effect:	Returns the lowest frequency contained in the trace
Syntax:	SA:TRACe:MINFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.5.26 SA:TRACe:MAXAmplitude

Query:

Effect:	Returns the datapoint with the highest amplitude in the trace
Syntax:	SA:TRACe:MAXAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<dBm> of the highest amplitude point

Example

```
:SA:TRAC:MAXA? Port1
9.63e+8 , -12.534
```

4.5.27 SA:TRACe:MINAmplitude

Query:

Effect:	Returns the datapoint with the lowest amplitude in the trace
Syntax:	SA:TRACe:MINAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<dBm> of the lowest amplitude point

4.5.28 SA:TRACe:NEW

Event:

Effect:	Creates a new trace
Syntax:	SA:TRACe:NEW

Parameters:	<trace name>
--------------------	--------------

4.5.29 SA:TRACe:RENAME

Event:

Effect:	Changes the name of a trace
Syntax:	SA:TRACe:RENAME
Parameters:	<trace>, either by name or by index <new name>

4.5.30 SA:TRACe:PAUSE

Event:

Effect:	Pauses (freezes) a trace
Syntax:	SA:TRACe:PAUSE
Parameters:	<trace>, either by name or by index

4.5.31 SA:TRACe:RESUME

Event:

Effect:	Resumes (unfreezes) a trace
Syntax:	SA:TRACe:RESUME
Parameters:	<trace>, either by name or by index

4.5.32 SA:TRACe:PAUSED

Query:

Effect:	Queries whether a trace is paused
Syntax:	SA:TRACe:PAUSED?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.5.33 SA:TRACe:PARAMeter

Event:

Effect:	Sets the measurement parameter that is stored in the trace
Syntax:	SA:TRACe:PARAMeter
Parameters:	<trace>, either by name or by index <parameter>, options are PORT ₁ and PORT ₂

Query:

Effect:	Queries the measurement parameter of a trace
Syntax:	SA:TRACe:PARAMeter?
Parameters:	<trace>, either by name or by index
Return value:	PORT ₁ or PORT ₂

4.5.34 SA:TRACe:TYPE

Event:

Effect:	Sets the storage type of a trace
Syntax:	SA:TRACe:TYPE
Parameters:	<trace>, either by name or by index <type>, options are OVERWRITE, MAXHOLD or MINHOLD

Query:

Effect:	Queries the storage type of a trace
Syntax:	SA:TRACe:TYPE?
Parameters:	<trace>, either by name or by index
Return value:	OVERWRITE, MAXHOLD or MINHOLD